


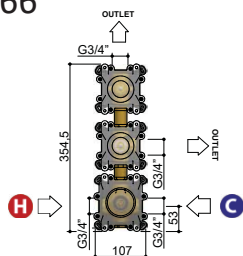


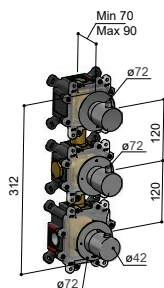

AR7066

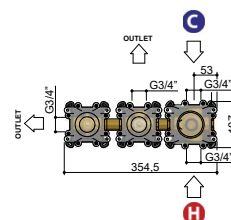

AR7067

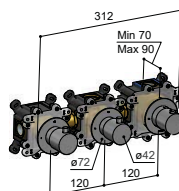

HBCB7066




AR7066EXT





HBCB7067





AR7066EXT



AR7071

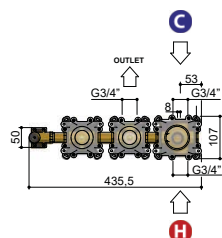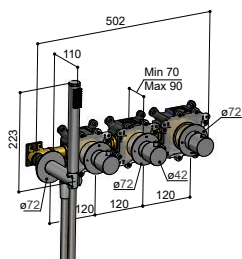

AR7072

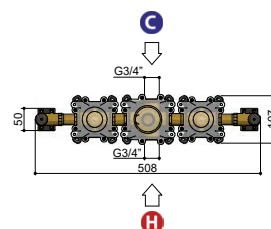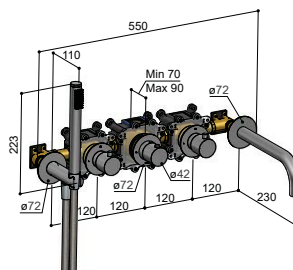

HBCB7071




AR7071EXT



HBCB7072





AR7072EXT

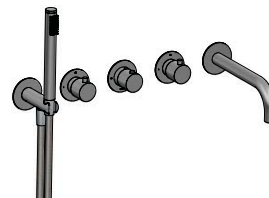



BEFORE STARTING / PRIMA DI INIZIARE / AVANT DE COMMENCER / VOR DEM START



P
bar

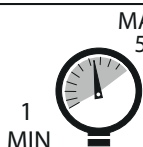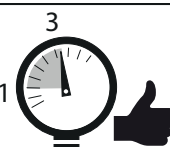1
MI

1

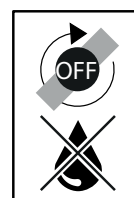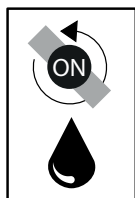RECOMMENDED:
BALANCED PRESSURES


ba




bar

CONCEALED PARTS FOR AR7066


Consider the thickness of the final coating (tiles, marble etc.)

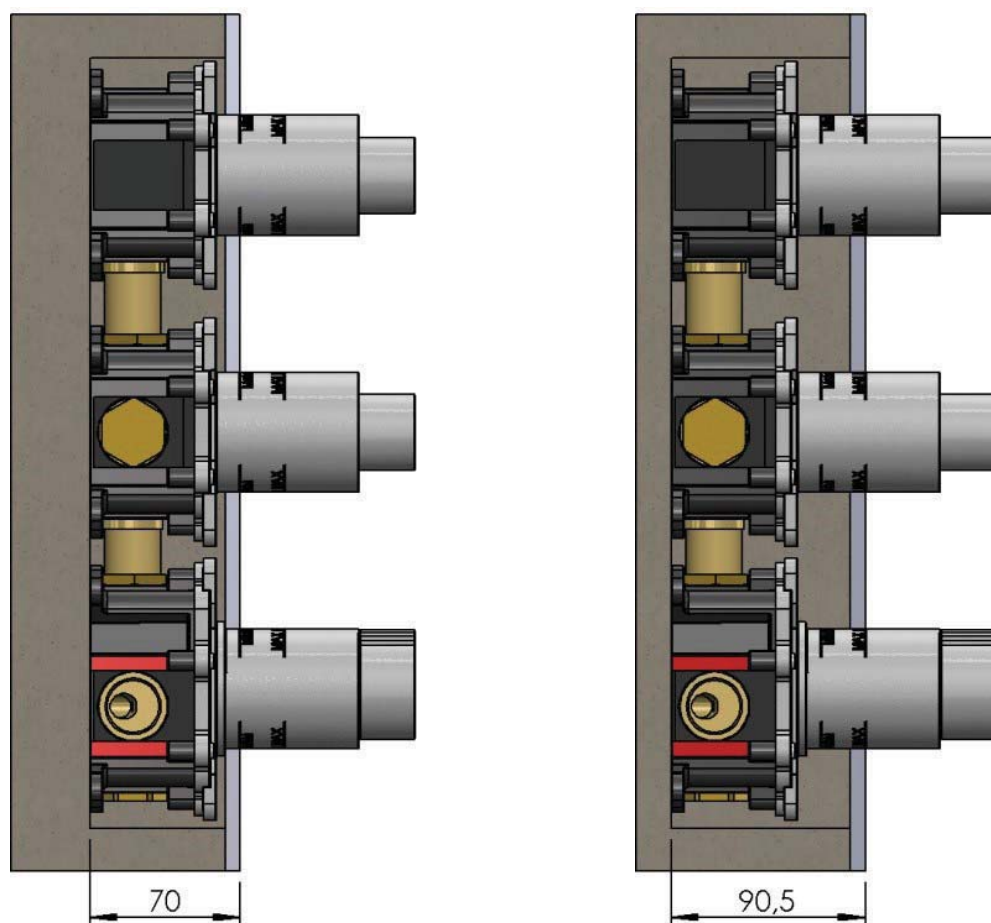


The plate slides from a minimum of 22 mm to a maximum of 1.5 mm.

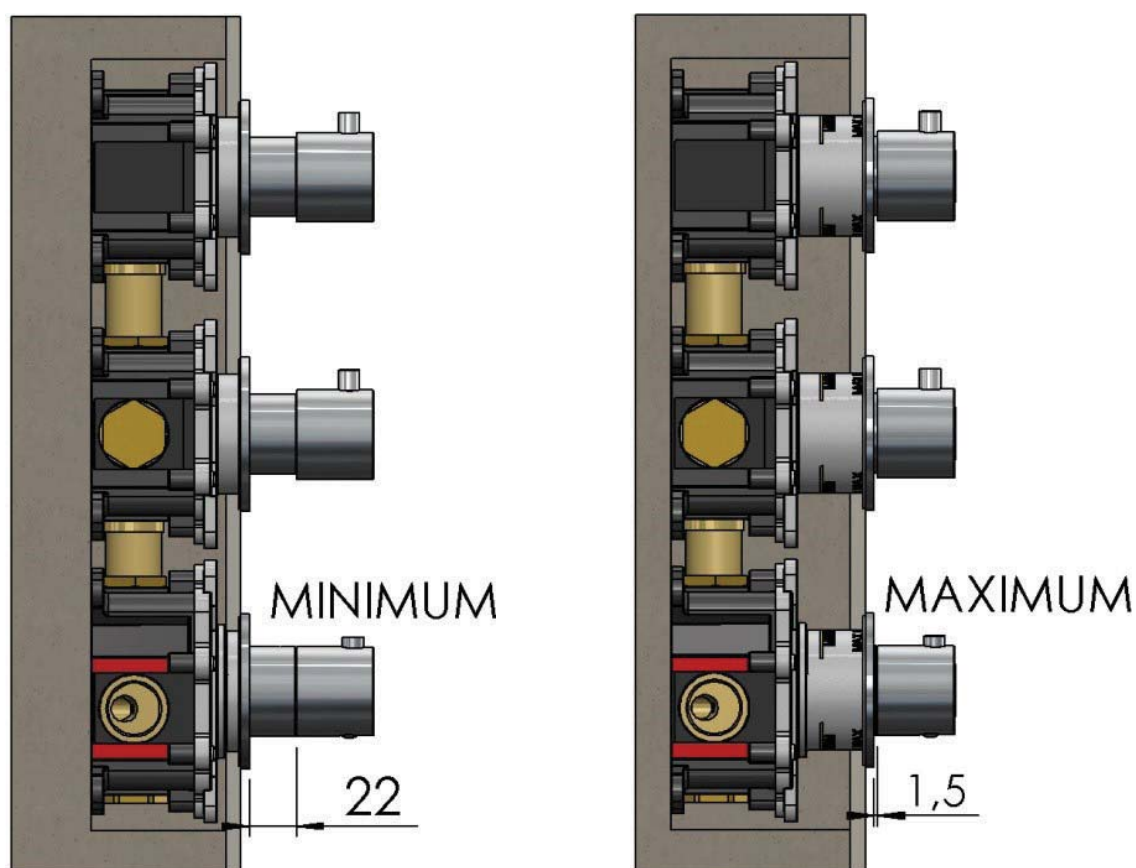


Use a level to find the correct position

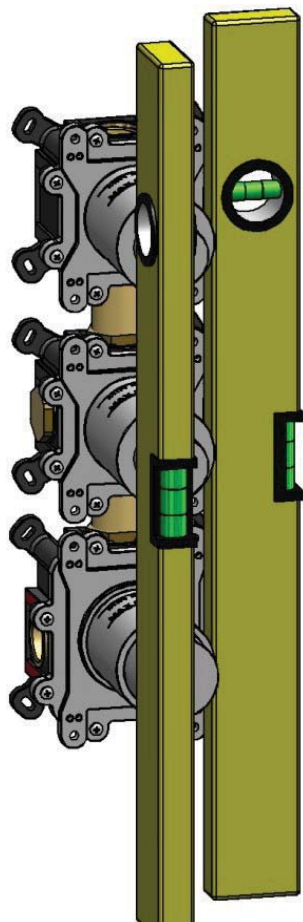


For **in-wall installation**, drill the wall and use plugs and screws to fix the box to the wall

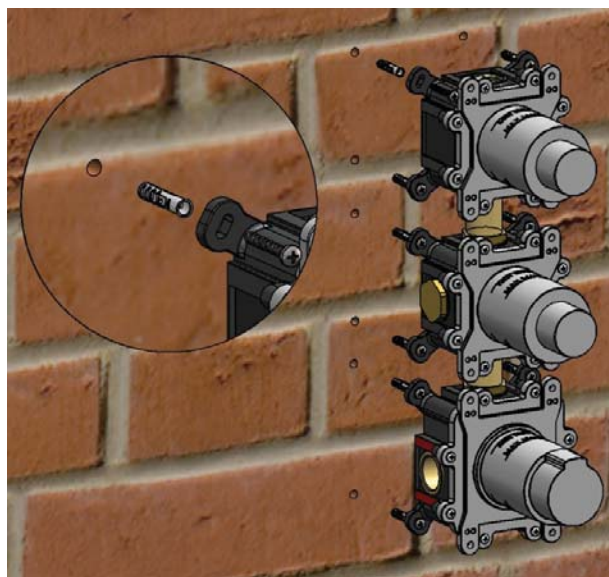

For **frame installation**, use the screws to fix the box to the wood panels

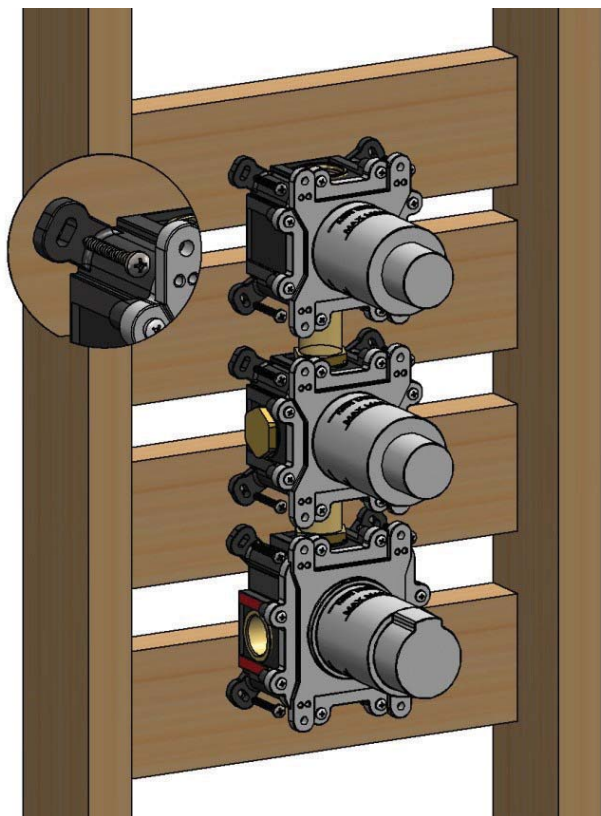


For **plasterboard**, use the screws to fix the box to the drywall

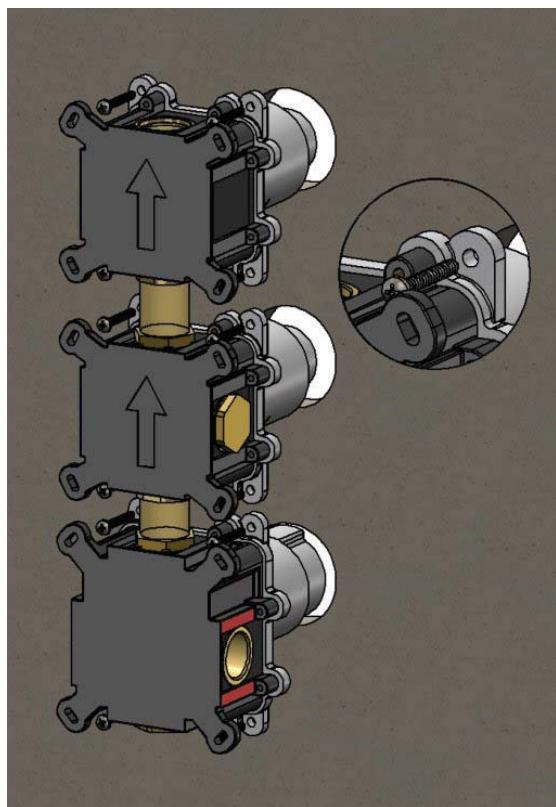


CONCEALED PARTS FOR AR7067 - AR7071 - AR7072


Consider the thickness of the final coating (tiles, marble etc.)

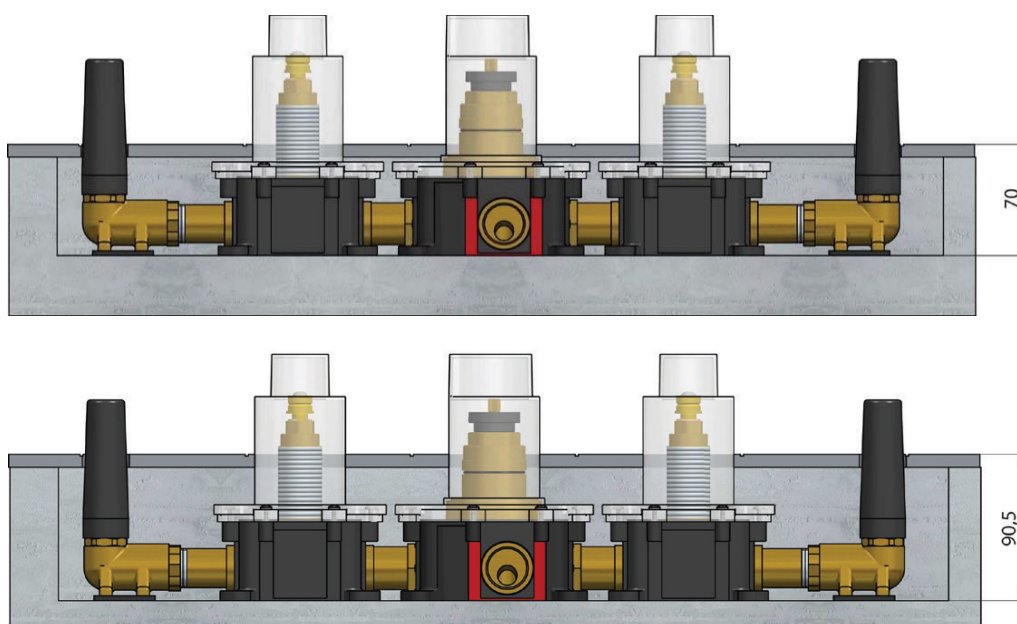


The plate slides from a minimum of 22 mm to a maximum of 1.5 mm.

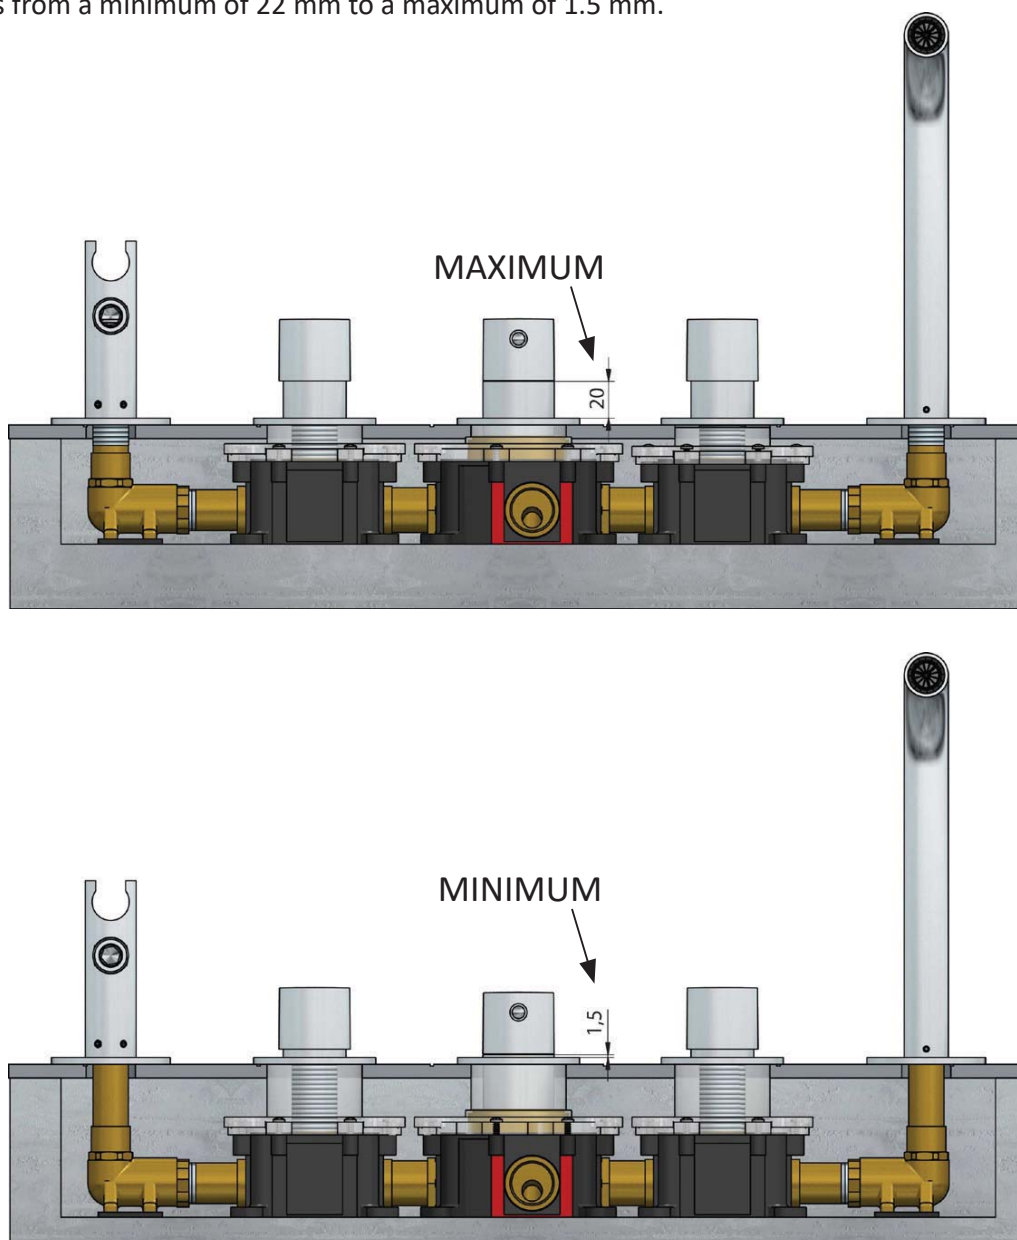


Use a level to find the correct position

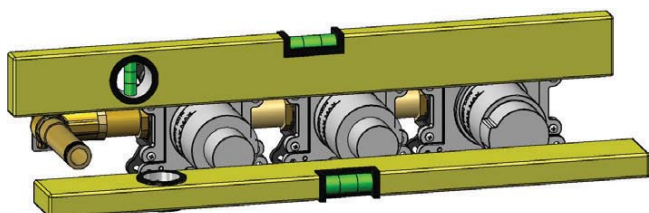


For **in-wall installation**, drill the wall and use plugs and screws to fix the box to the wall

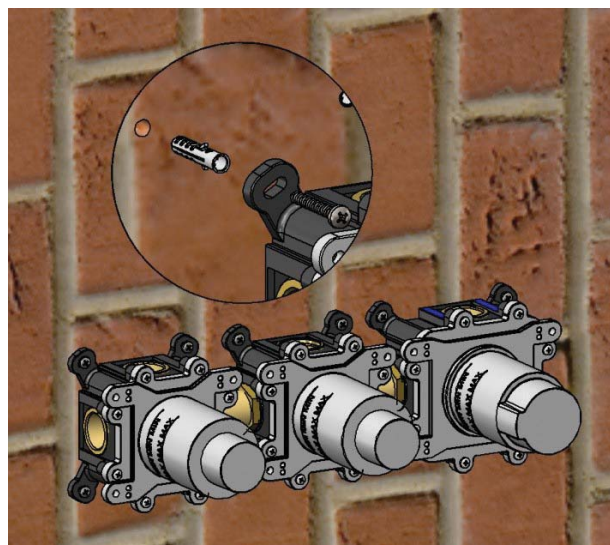

For **frame installation**, use the screws to fix the box to the wood panels

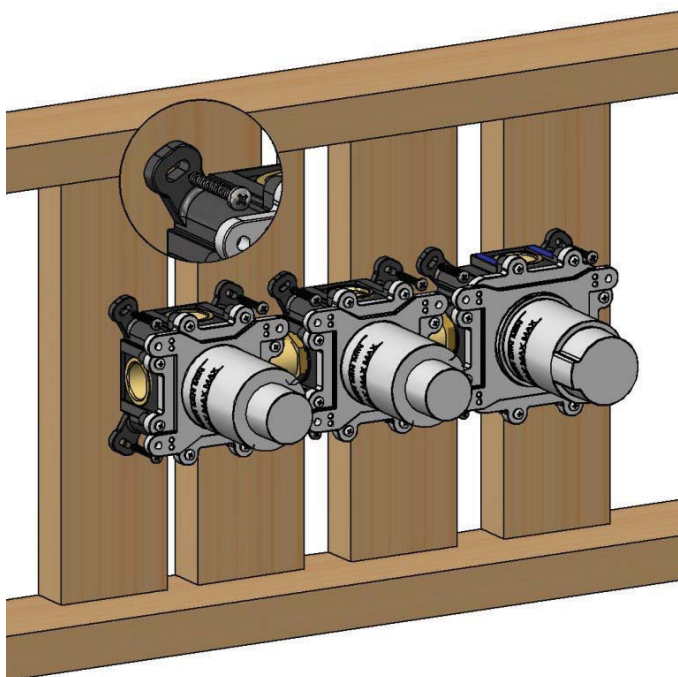


For **plasterboard**, use the screws to fix the box to the drywall

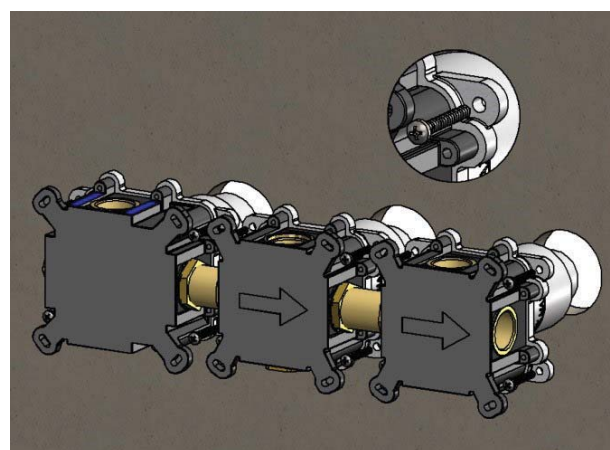


TRIM PARTS FOR AR7066


Before tiling attach the seal to the wall with glue.

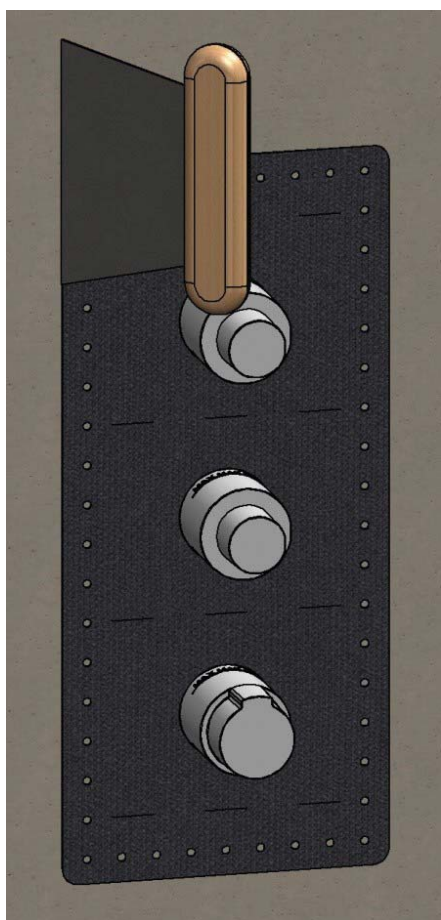

Once the mixer is installed in the wall, cut along the finished wall and remove the plastic protection.

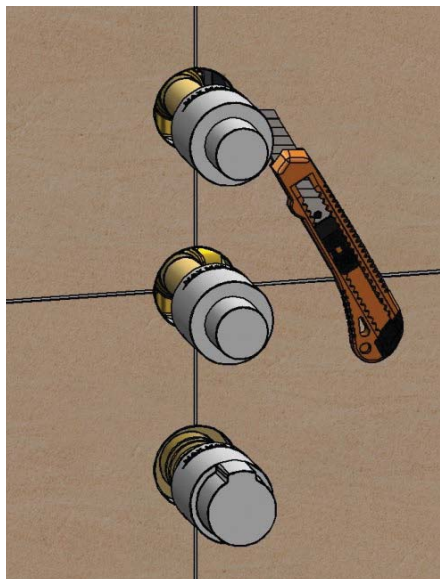

Pour silicone between the plastic protection and the wall

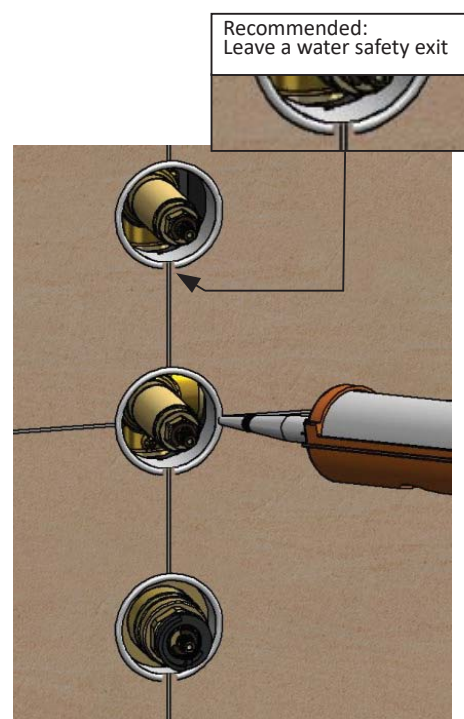

Fix the cover plate (1) on the threaded rod (2).

Screw the adapter (4) with their O-ring (3), until the plate (1) is against the wall.

Fix the insert (5) and fix the screw (6).

Position the handle (7) on the insert (5) and rotate until the vertical position is reached.


Screw the grub screw (8) with a 2,5 mm Allen key.

Screw the lever (9).

Fix the cover plate (10) on the chromed ring (11).


Fix the handle (12) screw the grub screw (13) with a 2,5 mm Allen key.

Fix the cap (14)

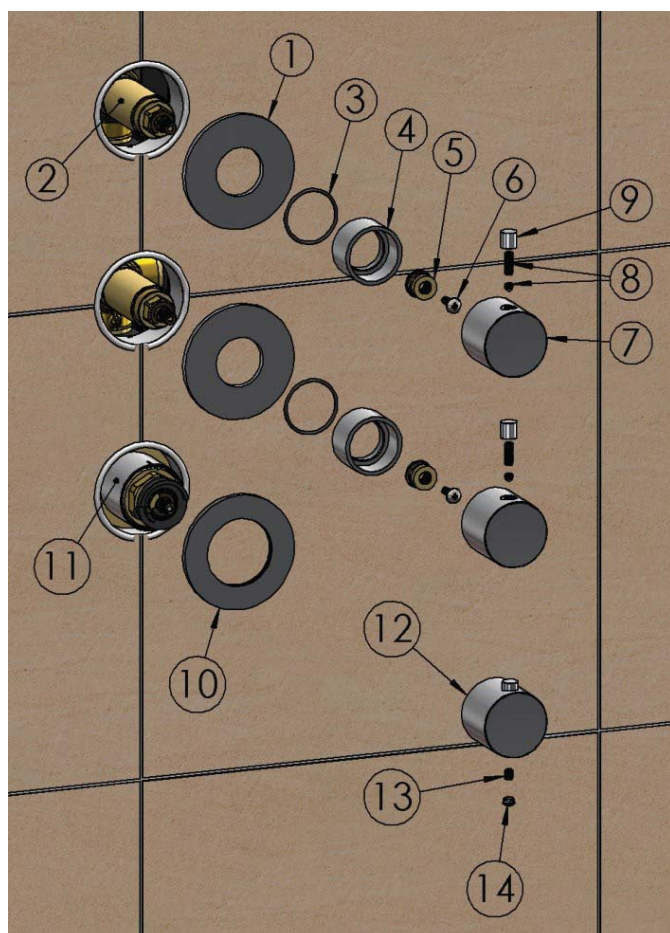


TRIM PARTS FOR AR7067 - AR7071 - AR7072



Before tiling attach the seal to the wall with glue.

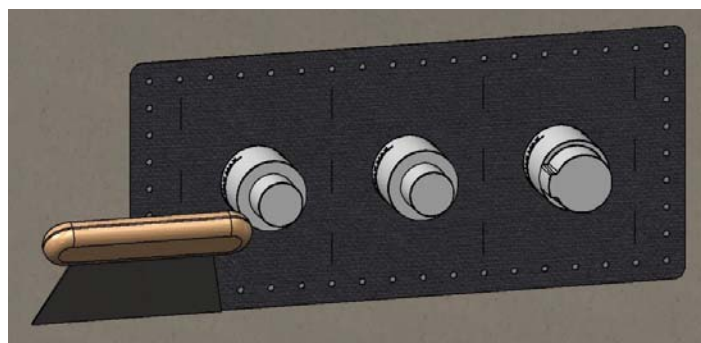

Once the mixer is installed in the wall, cut along the finished wall and remove the plastic protection.

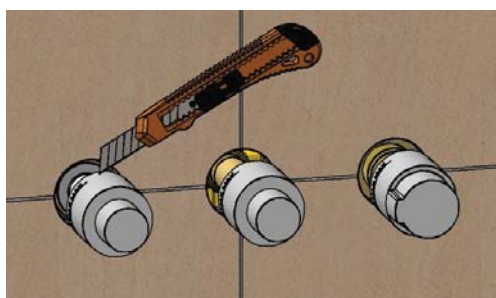

Pour silicone between the plastic protection and the wall

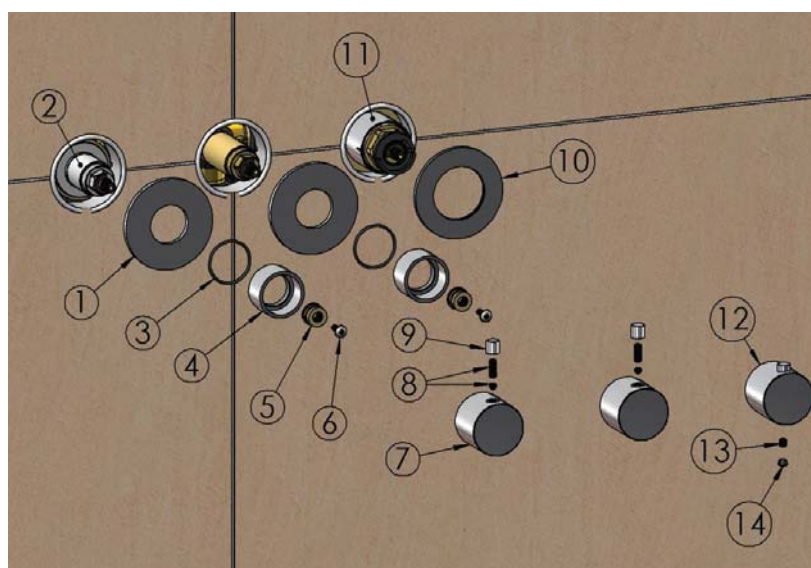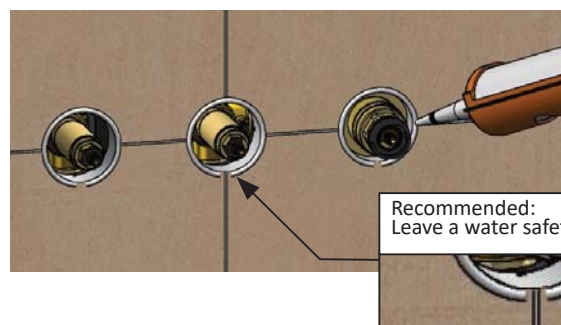

Fix the cover plate (1) on the threaded rod (2).

Screw the adapter (4) with their O-ring (3), until the plate (1) is against the wall.

Fix the insert (5) and fix the screw (6).

Position the handle (7) on the insert (5) and rotate until the vertical position is reached.

Screw the grub screw (8) with a 2,5 mm Allen key.

Screw the lever (9).

Fix the cover plate (10) on the chromed ring (11).

Fix the handle (12) screw the grub screw (13) with a 2,5 mm Allen key.


Fix the cap (14).

MAINTENANCE

CLEANING OR REPLACEMENT FOR THERMOSTATIC CARTRIDGE AND VALVE HOLDER



REMOVE THERMOSTATIC CARTRIDGE

1. Remove the cup (1), Unscrew the grub screw (2) with an 2,5 mm Allen key
2. Remove the handle (3). Remove the plate (4).
3. Close the water inlets, in order to isolate the thermostatic cartridge.
4. Remove the stop ring (5).
5. Unscrew the thermostatic cartridge (6) anti-clockwise with a 30mm wrench.
6. Remove the thermostatic cartridge (6) and clean its filters under running water or leave to soak in vinegar in presence of limestone. Grease the O-rings and, if damaged, replace them with new ones. 2x OR 2175 (44,17 x 1,78 mm), 1x OR 2187 (47,35 x 1,78 mm).

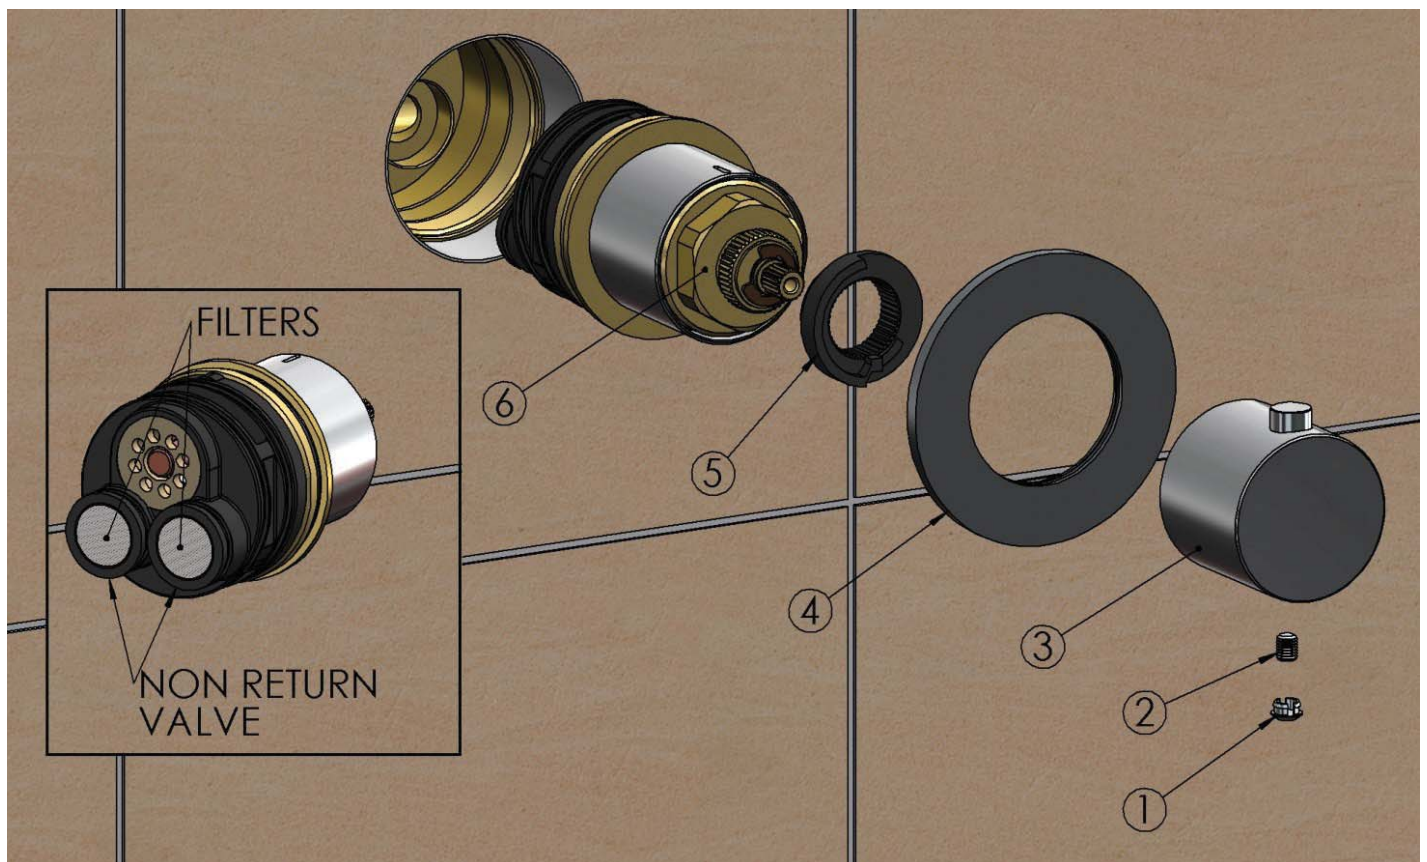


INSTALL THERMOSTATIC CARTRIDGE

1. Check that the reference on the body cartridge is upward
2. Match the reference on the body of the thermostatic cartridge with the reference in the mixer body

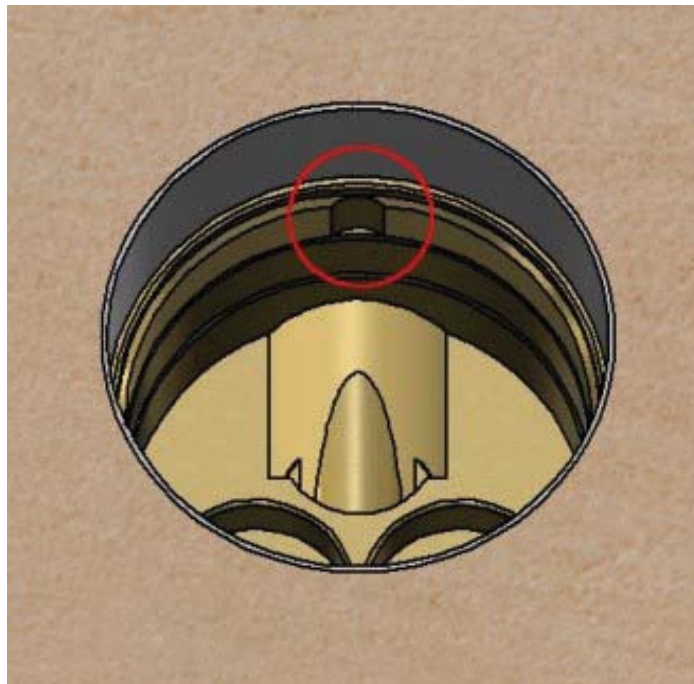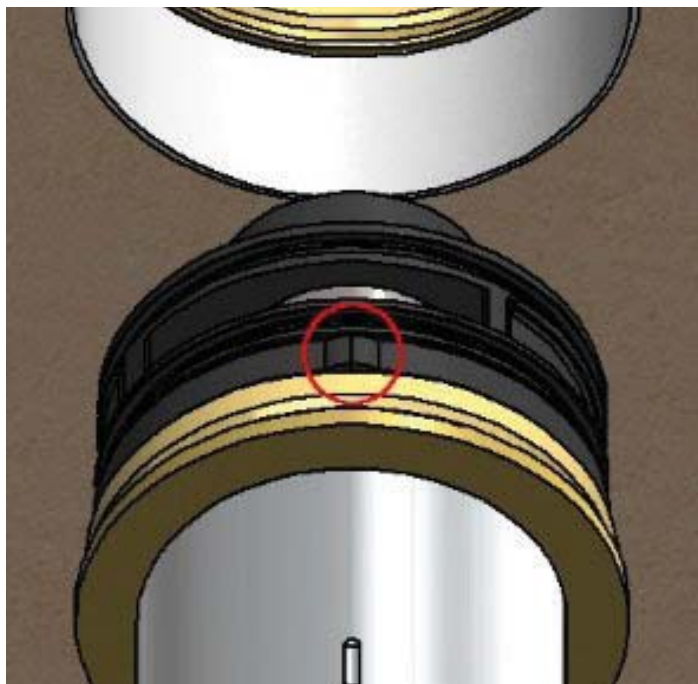


POSITION OF THE STOP RING

1. Place the stop ring (5) as shown in the image below.
2. Using the handle, rotate the broached rod (A) to reach the set temperature of 38°C (check the temperature with a thermometer).



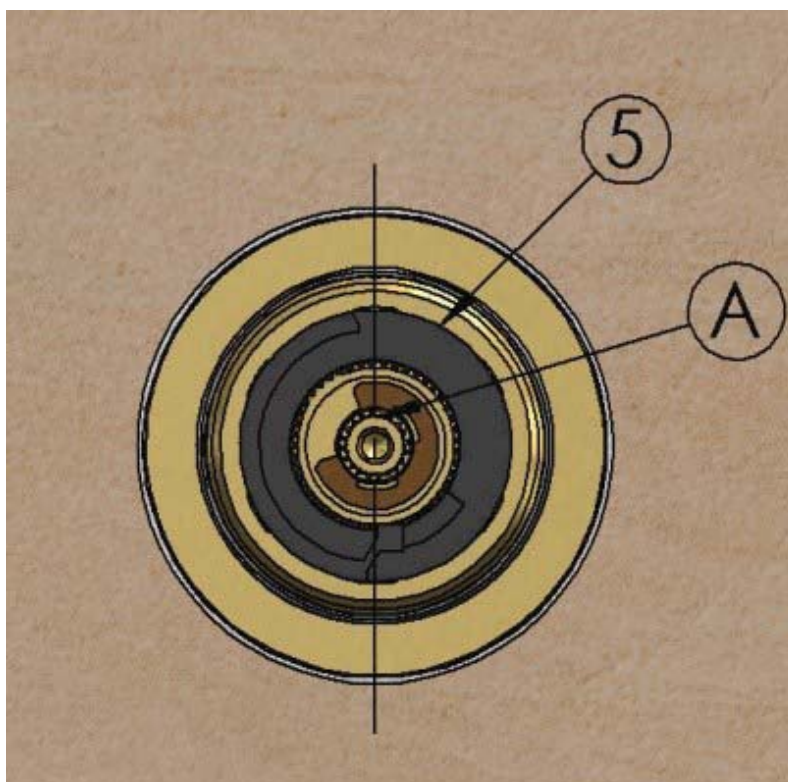


STOP-VALVES REPLACEMENT

1. Close the water inlets.
2. Remove the lever (1) and the grub screw (2) with 2,5 mm Allen key.
3. Remove the handle body (3)
4. Unscrew the chromed adapter (4), being careful not to lose the O-ring (5).
5. Remove the cover plate (6).
6. Unscrew the threaded rod (7).
7. Unscrew the headwork (8) anti-clockwise, with a 17 wrench.
8. Before replacing the headwork, clean thoroughly and grease the inner seat of the body.
9. Replace the headwork (8) and screw the threaded rod (7).
10. Assemble the trim following the instructions of TRIM FIXING.

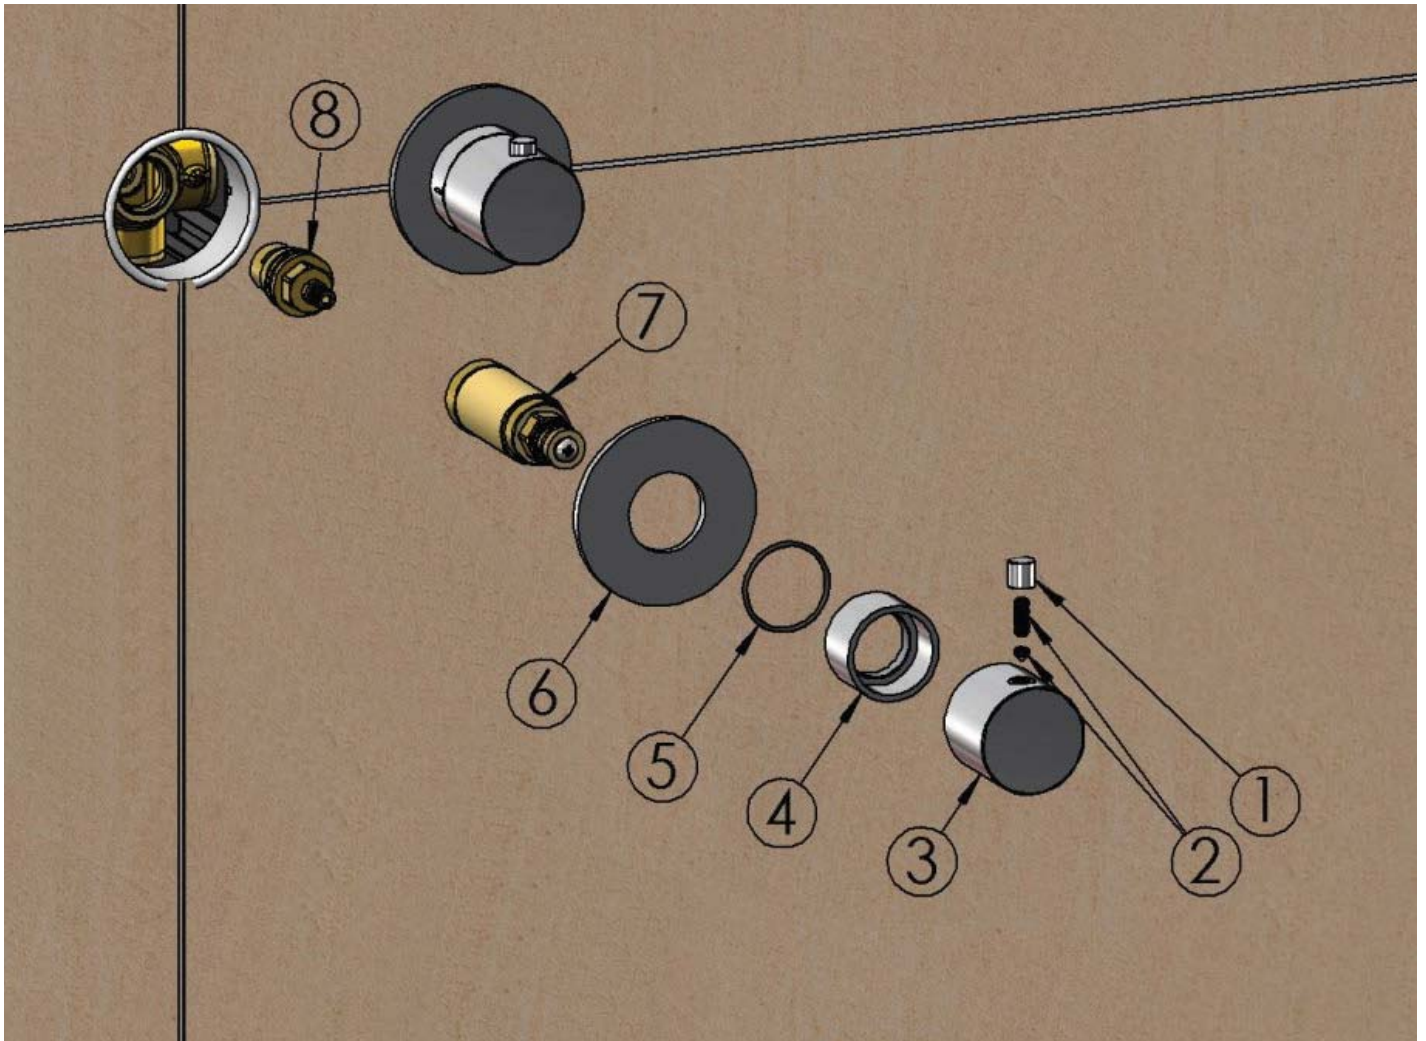

CLEANING / PULIZIA / NETTOYAGE / REINIGUNG

	✓			✗		
IX BRUSHED STEEL	 WATER ✓	 LIQUID SOAP ✓	 SMOOTH CLOTH ✓	 ABRASIVE SPONGE ✗	 ACID/ABRASIVE DETERGENT ✗	Inoxidable 316 steel Acciaio 316 inossidabile Acier 316 inoxydable Inoxidierbare Edelstahl 316
BCP BRUSHED COPPER PVD	 WATER ✓	 LIQUID SOAP ✓	 SMOOTH CLOTH ✓	 ABRASIVE SPONGE ✗	 ACID/ABRASIVE DETERGENT ✗	Inoxidizable PVD finish Finitura inossidabile in PVD Finition PVD inoxydable Inoxidierbare PVD-Ausführung
BGP BRUSHED GUNMETAL PVD	 WATER ✓	 LIQUID SOAP ✓	 SMOOTH CLOTH ✓	 ABRASIVE SPONGE ✗	 ACID/ABRASIVE DETERGENT ✗	Inoxidizable PVD finish Finitura inossidabile in PVD Finition PVD inoxydable Inoxidierbare PVD-Ausführung

MAINTENANCE - Never use for any reason cleaning solutions containing abrasive substances, chloric acids, ammonia, vinegar, bleach, domestic acids, disinfectants, or any type of abrasive pad.

Warning! Incorrect cleaning may permanently ruin the surface of the products and in such case the manufacturer may not be held liable for damage.

MANUTENZIONE - Non usare mai per qualsiasi motivo soluzioni detergenti contenenti sostanze abrasive, acido clorico, ammoniaca, aceto, candeggina, acidi domestici, disinfettanti o qualsiasi tipo di spugna o panno abrasivo. Attenzione! Una pulizia errata può rovinare in modo permanente la superficie dei prodotti e in tal caso il Produttore non può essere ritenuto responsabile per danni.

ENTRETIEN - N'utilisez jamais des solutions de nettoyage contenant substances abrasives, acide chlorique, ammoniacque, vinaigre, eau de javel, acides domestiques, désinfectants ou tout type de tissu abrasif.

Attention! Un nettoyage incorrect peut endommager de manière permanente la surface des produits et, dans ce cas, le Fabricant ne pourra être tenu responsable des dommages.

WARTUNG - Verwenden Sie niemals Reinigungslösungen, die Schleifmittel, Chlorsäure, Ammoniak, Essig, Bleichmittel, Haushaltssäuren, Desinfektionsmittel oder andere Arten von Schleifmitteln enthalten.

Warnung! Durch eine falsche Reinigung kann die Oberfläche der Produkte dauerhaft beschädigt werden. In diesem Fall ist der Hersteller nicht für Schäden haftbar.